

Manuale d'uso - Efficienza Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuell - Energieeffektivitet / Manuell - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual – Energieeffektivitet Руководство - Энергоэффективность / Käsiiraamat - Energiatõhususe / Rokasgrāmatā - Energieeffektivitātes

Table with 13 columns: PF, IT, EN, FR, DE, NL, ES, PT, SV, NO, FI, DK, RU, ET, LV. Rows include manufacturer details (FABER P2254), energy efficiency classes (AEchood, EEC, FDEhood, FDEC, LEhood, LEC, GFEhood, GFEC), airflow metrics (Qmin, Qmax, Qboost, SPEmin, SPEmax, SPEboost, P0, Ps), and other performance indicators (PI, F, Ebep, Qmax, Wbep, WL, Emiddle, Lwa). Each row contains specific values and units (e.g., kWh/a, lux/Watt, m3/h, Pa, W, dBA). The bottom section contains detailed instructions and safety warnings in multiple languages.

